## RC100 + RC200

## Remote Control Speakerphone



## Operating Instructions



Please read these instructions carefully before use. Keep for future reference.

Clarity, a Division of Plantronics, Inc. 4289 Bonny Oaks • Chattanooga, TN 37406 • USA Phone: (800) 426-3738 • Fax: (800) 325-8871

520001 PMI20204 ENG/FRE Rev B

## **Wall Mount Option**

- I. Use mounting screws or other hardware to secure the RC to the wall at the desired location.
- 2. Two mounting holes are located on the bottom of the RC unit. Measure the distance between the holes and then mark two points on your wall that match the distance between the mounting holes on your RC.
- 3. Place a mounting screw (not provided) at the location marked on your wall in the previous step. Be sure to use appropriate mounting hardware and supplies.
- 4. Align the screws with the holes in your RC unit and affix the RC unit firmly to your wall.

## **Important Safety Instructions**

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and persons including the following:

- Read and understand all instructions.
- **2.** Follow all warnings and instructions marked on the telephone.
- 3. Do not use this telephone near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement, near a swimming pool or any where else there is water.
- **4.** Avoid using a telephone (other than a cordless type) during a storm. There may be a remote risk of electrical shock from lightning.
- **5.** Do not use the telephone to report a gas leak in the vicinity of the leak.
- **6.** Unplug this telephone from the wall outlets before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.

- Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
- 8. Do not cover the slots and open ings on this telephone. This tele phone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
- 9. Operate this telephone using the electrical voltage as stated on the base unit or the owner's manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
- 10. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
- II. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
- **12.** Never push any objects through the slots in the telephone. They can touch dangerous voltage

## **Important Safety Instructions**

- points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the telephone.
- 13. To reduce the risk of electrical shock, do not take this phone apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- 14. Unplug this product from the wall outlets and refer servicing to the manufacturer under the following conditions:
  - **A.** When the power supply cord or plug is frayed or damaged.
  - **B.** If liquid has been spilled into the product.
  - **C.** If the telephone has been exposed to rain or water.
  - D. If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require exten sive work by a qualified tech nician to restore the tele phone to normal operation.

- **E.** If the telephone has been dropped or the case has been damaged.
- **F.** If the telephone exhibits a distinct change in performance.
- **15.** Never install telephone wiring during a lightning storm.
- 16. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 17. Never touch uninsulated tele phone wire s or terminals unless the telephone line has been dis connected at the network interface.
- **18.** Use caution when installing or modifying telephone lines.
- 19. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

**SAVETHESE INSTRUCTIONS** 

# ADDITIONAL SAFETY NOTES FOR CANADIAN USERS

The following items are included as part of the CS-03 Requirements. The standard connecting arrangement for the equipment is CAIIA. This product meets the applicable Industry Canada technical specifications.

**NOTICE:** The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements. The Department does not guarantee that the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any

repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**CAUTION:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. The Ringer Equivalent Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalent Number of all the devices not exceed five.

**SAVE THESE INSTRUCTIONS** 

## **TABLE OF CONTENTS**

CHAPTER I.	INTRODUCTION	2
CHAPTER 2.	PACKAGE CHECKLIST	2
CHAPTER 3.	FEATURES IDENTIFICATION	3
	INSTALLATION	
CHAFTER 4.		
	A. Batteries	
	B. Connections	
	C. Setting Up Your RC	4
CHAPTER 5.	OPERATION	6
	A. Programming Numbers Into Memory	6
	B. Making Phone Calls	6
	I. Dialing on the keypad	
	2. Memory dialing from console	<u>6</u>
	3. Auto dialing the first number stored in MI	
	4. Dialing using the Scan button	7
	5. Dialing using the Remote Transmitter	
	C. Answering Phone Calls	/
	Üsing the keypad  2. Using the Remote Transmitter	/ 7
	3. Voice activated answering	
	D. Other Operations	
	I. Redialing	
	2. Flash	8
	3. Voice mail indicator	
	4. Unanswered call indicator	
	5. Telebanking and credit card calling	
CHAPTER 6.	OPTIONAL ACCESSORIES	9
	A. Air Switch™	9
	B. Pillow Switch	
	C. Lapel Microphone	
	D. Headset	
OUICK STAR	T GUIDE/SUMMARY	10
•	IN CASE OF DIFFICULTY	
	MAINTENANCE	
	FCC INFORMATION	
	.WARRANTY	
	. FEATURE SUMMARY	
	S	
INDEX		19

# CHAPTER I

Thank you for selecting the exciting new **RC** Remote Control Speakerphone from CLARITY, Inc. It has been designed to meet the highest quality standards in order to provide you with years of convenient and trouble—free service.

Please read these operating instructions thoroughly before using the **RC**. Or, to begin using the **RC** as quickly as possible, see Chapter 5 "Quick Start Guide/Summary". Keep this manual for future reference.

You must save your sales receipt as proof of purchase in the event that you need warranty service.

If you have any questions about your **RC**, please call our Customer Service Department at:

Voice: (800) 426-3738 TTY: (800)772-2889 Fax: (800) 325-8871

# CHAPTER 2 PACKAGE CHECKLIST

Your **RC** package includes the items as shown below:

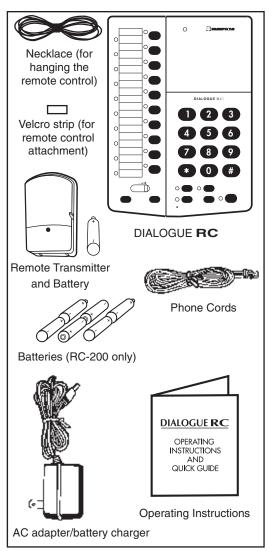


Figure I – DIALOGUE RC Components.

# CHAPTER 3 FEATURES IDENTIFICATION

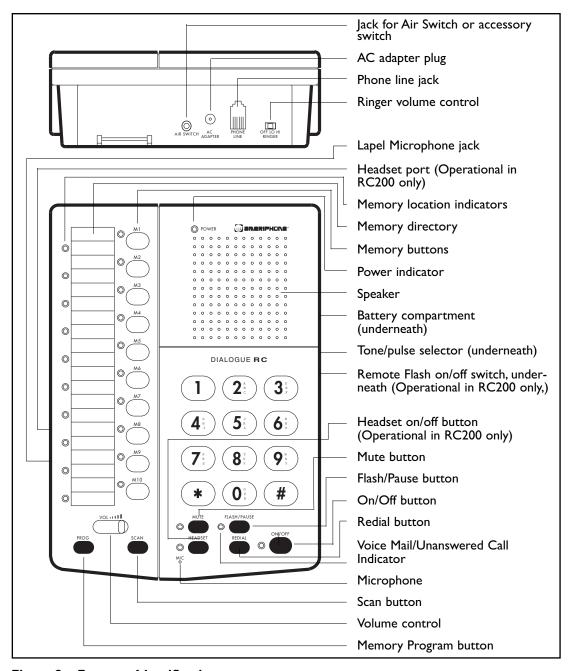


Figure 2 - Features Identification

# CHAPTER 4 INSTALLATION

#### A. Battery (included with RC200)

#### **Speakerphone**

I. Six "AA" size,
Nickel Metal Hydride
(Ni-MH) rechargeable batteries are
used for back-up
during a power outage (Fig 3).They
power the RC
for approximately
5 hours. DO NOT
USE ALKALINE
BATTERIES, they wi




Figure 3 – battery compartment

BATTERIES, they will damage your equipment.

#### **Remote Transmitter**

2. Install the "23A" size 12V alkaline cigarette lighter battery in the Remote Transmitter (included) as shown (Fig 4). With normal usage, it lasts 6–12 months. If the power indicator light is faint or does not come on when the button is pressed, replace the battery. The Remote Transmitter has an operating range of up to 40 feet.

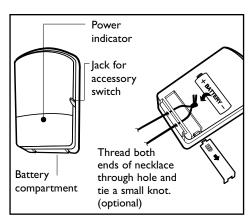


Figure 4 - Remote Transmitter

#### **B.** Connections

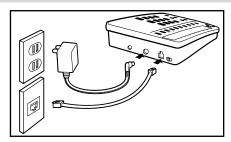


Figure 5 – Connection of phone line and AC adapter

- Connect the phone line and AC adapter as shown.
- 2. Set the tone/pulse selector (T/P) to T if you have touch tone service, set to P if you have pulse dialing (rotary). (See Fig 2)

The **RC** can be placed on a desk, or mounted on the wall. Do not put the **RC** on or next to metal surfaces, computers, televisions, radios, microwaves, or other electrical equipment that can cause interference to the wireless signal from the Remote Transmitter.

#### C. Setting up your RC

The **RC** comes with the following operating settings from the factory:

- Scan rate is 5 seconds per memory location.
- 2. Voice activated answering (RC200 only) is off.
- 3. Unanswered call indicator is on.
- Voice mail indicator (RC200 only) is off.
- **5.** Tone/pulse switch set to Tone.
- **6.** Ring volume set to Hi.
- 7. "0" (operator) is programmed into first memory location of M1.
- 8. Remote flash switch (RC200 only) is off.

## CHAPTER 4 (CONTINUED)

You may set up the **RC** in the following manner to better suit your needs.

#### **Setting the Scan Function**

#### If you have **RCI00**:

Only the first six numbers in the memory are automatically scanned. It stops at each memory location for 5 seconds to allow you to select.

To turn scan function off (or on):

- I. Press PROGRAM.
- 2. Press 0 on the keypad to turn it off; or press 1 key on the keypad to turn it on.
- 3. Press SCAN button.

#### If you have RC200:

All memory locations with numbers stored are automatically scanned. The scan rate determines how long the **RC200** pauses at each memory location before moving on to the next one.

To turn scan function on or off:

I. Press PROGRAM




Figure 6

Using chart, select length of pause and press the corresponding digit on keypad.

Key Entered	Length of Pause at Each Location in Seconds
0	Scan Function Off
0	5
2	4.5
3	4
4	3.5
6	3
6	2.5
0	2
8	1.5
0	1

Figure 7

3. Press SCAN button.




Figure 8

To turn Voice Activation on (or off) (RC200 only):

- I. Press PROGRAM.
- 2. Press MUTE button twice. The MUTE indicator flashes once, and the RC200 emits four beeps to confirm that Voice Activation has been turned on.
- **3.** To turn it off, repeat steps I and **2.** This command is confirmed by four beeps.

To turn the Unanswered Call Indicator (RC200) feature off (or on):

- I. Press PROGRAM.
- **2.** Press **HEADSET** button twice. (Emits four beeps to confirm command).
- To turn it on again, repeat steps I and 2, and the HEADSET indicator flashes once

To turn the Voice Mail Indicator feature on (or off), (RC200 only):

- I. Press PROGRAM.
- Press FLASH/PAUSE button twice.
   RC200 emits four beeps and the FLASH/PAUSE indicator flashes once.
- To turn it off again, repeat steps I and 2, and the FLASH/PAUSE indicator does not flash.

To turn the Remote Flash feature on (or off) (RC200 only):

 Slide remote flash switch to "On" (or "Off") position.

### **CHAPTER 5 OPERATION**

For optimum communication clarity, speak into the RC as close as possible, not to exceed 15 feet away. Keep the microphone free from obstructions. Do not speak at the same time as the other person. Also, adjust the volume control and set the ring volume to best suit your hearing needs.

#### A. Programming numbers into memory

Your RC can store up to 20 numbers (two numbers per button) in its memory for fast, one-touch dialing. When programming, pressing the FLASH/PAUSE button between numbers inserts a 2 second pause in dialing.

#### To program a number into memory:

Press **PROGRAM**.




Figure 9

Dial the number (up to 40 digits).




Figure 10

- Select the memory button to store this number, press once for first location. or twice for second location. When the number is programmed, it emits four "beeps" to confirm the number is stored.
- 4. If you make a mistake or want to change the number, repeat from step 1.
- 5. To erase a number, press **PROGRAM**. then FLASH/PAUSE, and then the corresponding memory location.

#### B. Making phone calls

#### Dialing on the keypad

I. Press ON/OFF button and listen for dial tone.



Figure 11

2. Dial the number on the keypad. (If no number is dialed within 7 seconds. **DIALOGUE RC** automatically dials the first number stored in memory location MI.)




Figure 12

3. When finished, press the **ON/OFF** button to hang up.

### Memory dialing from console

I. For the first number stored in each memory button, press the memory button once. For the second number. press the memory button twice. The indicator light on the directory shows

the memory selected.



Figure 13

- 2. The number is dialed after a 3 second wait, allowing you time to change your
- 3. When finished. press the ON/OFF button to hang up.

selection.




Figure 14


# CHAPTER 5 (CONTINUED)

## Auto Dialing the first number stored in MI.

- A. From keypad
  - I. Press **ON/OFF** button or just press MI.
  - **2.** The number is dialed automatically within 7 seconds.
- **B.** Using Remote Transmitter With Scan function on:
  - I. Press Remote Transmitter.
  - The number is dialed automatically after scanning all memories 3 times.
- C. With Scan function off:
  - I. Press Remote Transmitter.
  - 2. The number is dialed automatically.

#### Dialing by using the SCAN button

Before you can use memory scanning for dialing, you must have the phone numbers stored in the memory first (page 6). To use memory scanning, the Scan function must be on. See Chapter 4 section C. Memory locations with no number stored are skipped. The memory directory is scanned three times or until a number is selected. If no number is selected, the first number in MI is dialed.



• I. Press the **SCAN** button.

Figure 15

- 2. The memory location indicators light up as it scrolls down the memory locations. If you have RC100: Only the first six memory locations are scanned. If you have RC200: All 20 memory locations are scanned (lt "beeps" when advancing to the next memory location.)
- 3. When the desired memory location is lit,

4. The RC automatically dials the number selected.






Figure 16

#### Dialing using the Remote Transmitter

- **A.** With Scan function on:
  - I. Press the Remote Transmitter to begin scanning.



Figure 17

- 2. When the desired memory location is lit, press the Remote Transmitter. The RC auto matically dials the number selected.
- **3.** Press the Remote Transmitter once to hang up.
- **B.** With Scan function off:
  - I. Press the Remote Transmitter once.
  - 2. It dials the first number stored in MI.

#### C. Answering phone calls

### Using the keypad

 When the phone rings, press the ON/OFF button to turn it on.




2. When finished, press the **ON/OFF** button to hang up.



#### **Using the Remote Transmitter**

I. When the phone rings, press the Remote Transmitter to turn on.



2. Press the remote button once to hang up.

Figure 19

# CHAPTER 5 (CONTINUED)

## Voice Activated answering (RC200 only)

- The voice activated Answering feature has been preset to OFF in the factory. To activate this feature, see page 5.
- Say "Hello" or whistle loudly, between rings. (If a headset is used, answer by speaking into the headset microphone.)
- Use the remote control, or press the ON/OFF button on the console to hang up.

<u>Please Note</u>: When the party that called you hangs up, the telephone company switching office may re-establish a dial tone on your line.

When dial tone returns, your **RC200** will hang up automatically. Prior to hanging up, the **RC200** emits two short beeps as a reminder.

### **D.** Other Operations

### Redialing the last number dialed

- I. Press the **REDIAL** button on the keypad. **OR**
- 2. Press and hold the Remote Transmitter for 3 seconds, until the ON/OFF indicator on DIALOGUE RC turns on.




Figure 20



Figure 21

#### Flash button

The flash button is used to access special telephone functions and services available from your local phone company, such as call waiting, 3—way calling, and others. Call your phone company for more information.

If you have the **RC200**, you can use the Flash feature with the Remote Transmit--ter. Turn the Remote Flash switch on (see Chapter 4 section C). When you are on the phone line, press the Remote Transmitter button twice in succession, within three seconds, to generate the "flash".

#### Voice Mail Indicator (VMI)

If you subscribe to voice mail service from your phone company, the **FLASH/PAUSE** light flashes and the RC beeps (once every 3.5 minutes) to inform you that you have voice mail messages. You also hear a special "stutter" dial

tone sent from the phone company. To retrieve your messages, follow the instructions provided by your phone company. Making an outgoing call cancels the indicator light.



Figure 22

## Unanswered Call Indicator

If the **RC** rings three or more times and is not answered, the **FLASH/PAUSE** light




Figure 23

flashes to indicate that you missed a call. Turning on the **RC** cancels the indicator.

### Telebanking and Credit Card Calling

You can transmit account or personal identification numbers (PIN) from the **RC** by pre-storing them in memory.

- Program account or PIN numbers into a memory location in advance by following the same steps you would program a phone number.
- When the automated phone system requests it, press the memory button where your account number or PIN is stored.

# CHAPTER 6 OPTIONAL ACCESSORIES

#### A. AIR SWITCH™

This Accessory switch allows you to place and answer calls and control every function of the RC by blowing gently on its air sensor. It snaps on to either the rear of the console or the remote control for the ultimate in "no-touch" accessory and control.



#### **B. PILLOW SWITCH**

Plugs into the console or the remote control for your convenience. Allows you to control phone functions by gently touching it with your arm, leg, head, shoulder or other body movement. A 6 foot long cord connects it easily.



#### C. LAPEL MICROPHONE

This highly sensitive microphone, clips to your collar and provides handsfree, crystal clear, high fideli-



ty sound for people who have weak voices. It has a cord that is 5 feet long.

#### D. HEADSET WITH MICROPHONE

Ensure the utmost privacy for personal conversations or confidential business calls. This light weight unit plugs into the telephone with a 61/2 foot long cord and is comfortable to wear, even for extended periods of time.



For more information, please call or write:
Clarity Product Customer Service
4289 Bonny Oaks Drive
Chattanooga, TN 37406
(800) 426-3738 VOICE
(800) 772-2889 TTY
(800) 325-8871 FAX
www.clarityproducts.com

# QUICK START GUIDE/ SUMMARY

For more detailed description see Chapter 5.

OPERATION	STEPS		
FACTORY PRESET MODES OF OPERATION	Scan rate = 5 seconds per memory		
	location.		
	<ul> <li>Tone/pulse switch set to Tone.</li> </ul>		
TO CHANGE MODES OF OPERATION			
Setting the Scan Function	Press PROGRAM.		
If you have <b>RC100</b> To turn Scan function off (or on):	Tress FROGRAM.		
If you have RC200	• Press PROGRAM.		
To turn Scan function off (or on):			
To turn Voice Activation on (or off),	Press PROGRAM.		
(RC200 only):			
To turn the Unanswered Call	Press PROGRAM.		
Indicator feature off (or on):			
To turn the Voice Mail Indicator	Press PROGRAM.		
feature on (on off), (RC200 only):			
PROGRAMMING NUMBERS INTO MEMORY			
	Press PROGRAM.		
MAKING A CALL BY DIALING ON THE RC	•		
A. From the keypad	Press ON/OFF button.		
B. Auto Dialing the first number stored in MI	Press <b>ON/OFF</b> button.		
C. Memory Dialing	Press a memory button once to dial the first		
stored number, twice for the second number.			
MAKING A CALL USING THE REMOTE TRA			
A. With Scan function on	Press Remote Transmitter once.		
B. With Scan function off	Press Remote Transmitter once.		
ANSWERING A CALL	_		
A. From the keypad	Press ON/OFF button to answer.		
B. Using the Remote Transmitter	Press Remote Transmitter once to answer.		
C. Using Voice Activation,	Say "Hello" or whistle between rings		
(RC200 only).	to turn on phone.		

	Voice Activated answering is off, (RC200 only). Ring volume set to Hi.	<ul> <li>Unanswered call indicator is on.</li> <li>"0" (operator) is programmed into the first memory location of MI.</li> </ul>	<ul> <li>Voice Mail indicator is off, (RC200).</li> <li>Remote Flash switch is off, (RC200 only).</li> </ul>
0	Press <b>0</b> on the keypad to	<b>②</b> Press <b>SCAN</b> button.	
	turn it off; or Press I key on the keypad to turn it on.		
0	Press <b>0</b> key to turn it off; or Press <b>1-9</b> keys to turn it on. See	<b>③</b> Press <b>SCAN</b> button.	
2	Page 5 for rate selection guide. Press <b>MUTE</b> twice.		
2	Press <b>HEADSET</b> twice.		
2	Press <b>FLASH/PAUSE</b> twice.		
0	Dial the number (up to 40 digits).	Select the memory button. Press twice for second location.	s once for first location, or
9	Dial the number.	Press ON/OFF button to hang	up.
2	The number is dialed in 7 seconds.	0	
	When the desired directory	❸ Press Remote Transmitter to har	og UD
G	location is lit, press it again.	OTTESS Remote transmitter to har	ig up.
	The first number stored	Press Remote Transmitter once	to
0	under MI is dialed.	hang up.	
	under MI is dialed.		
2		up.	

# CHAPTER 7 IN CASE OF DIFFICULTY

If any problem should occur during operation of your **RC**, review the list below. Should the difficulty persist, contact AMERIPHONE or your authorized dealer before sending the phone for service.

SYMPTOM	CAUSE AND REMEDY	
No dial tone	- Check all phone line connections.	
No power	- Check power connection.	
Does not dial out	<ul><li>Check all phone line connections and power connection.</li><li>Change to pulse dialing and try again.</li></ul>	
Does not dial memory number	- No number programmed in memory.	
Remote Transmitter does not work	<ul> <li>Check or replace battery.</li> <li>Check channel settings.</li> <li>Make sure no part of the RC system is on or near metal surfaces or electrical equipment.</li> </ul>	
No audible ring — Make sure the ringer is not set to "Off" position		
Does not scan through memory	– Turn on Scan function.	
Scanning too fast/slow	- Program Scan rate to a slower/faster setting. (Dialogue RC200 only.)	
Cuts in and out while speaking/ listening	<ul> <li>Avoid speaking at the same time as the other party. Take turns.</li> </ul>	
SENSITIVITY ADJUSTMENT YOU MUST CONTACT AMERIPHONE BEFORE MAKING THE FOLLOWING ADJUSTMENT:		
Callers can't hear your voice when using the optional headset with integrated microphone	- Turn <b>HEADSET MIC GAIN</b> adjustment, located on bottom of unit, clockwise to increase sensitivity, counterclockwise to decrease.	

# CHAPTER 7 (CONTINUED)

#### **CHANNEL SETTINGS**

The **RC** and Remote Transmitter use radio signals to communicate with each other. For the Remote Transmitter to activate the **RC**, they both have to be on the same "channel." A "DIP Switch" is used for channel selection.

Your phone and remote have been preset at the factory to a standard channel setting. Under normal operating conditions, there is no adjustment necessary.

If your system encounters interference and repeatedly activates by itself for no obvious reasons, it may be necessary to change DIP Switch settings on the **RC** and Remote Transmitter.

- I. Unscrew bottom of the Remote Transmitter.
- Locate DIP Switches on Remote Transmitter and on bottom of RC.
- Using a ball point pen, change the settings on all switch positions to match exactly on both RC and Remote Transmitter.
- 4. Replace remote cover and test.

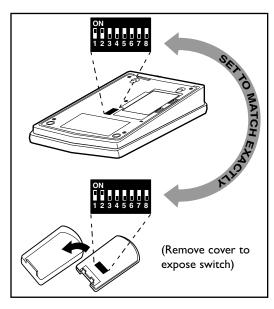


Figure 24 - Channel setup

# CHAPTER 8 MAINTENANCE

# CHAPTER 9 REGULATORY INFORMATION

To ensure trouble—free service, your **RC** should always be treated with care. Do not drop or subject the phone to high impact. The unit can be cleaned with a damp cloth and a mild detergent. Never use abrasives or solvents.

Keep the unit plugged into the electrical outlet at all times, except when cleaning. This will automatically recharge the optional back—up batteries, and keep the phone operational for incoming calls. We recommend using a surge protector to prevent damage to the **RC** in case of power surges or electrical storms.

#### Part 68 of FCC Rules Information

This RC100 or RC200 Remote Controlled Speakerphone complies with Part 68 of the FCC rules and the requirements adopted by the ACTA.

On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug, RJII USOC, is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX .The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this telephone equipment, for repair or warranty information, please contact Clarity, I-800-426-3738. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This telephone equipment is not intended to be repaired and it contains no repairable parts. Opening the equipment or any attempt to perform repairs will void the warranty. For service or repairs, call 1-800-426-3738

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this telephone equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone equipment is hearing aid compatible.

We recommend the installation of an AC surge arrester in the AC outlet to which this equipment is connected. The telephone companies report that electrical surges, typically lighting transients, are very destructive to customer terminal equipment connected to AC power sources

## Customer-Owned Coin/Credit Card Phones:

To comply with state tariffs, the telephone company must be given notification prior to connection. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

#### Part 15 of FCC Rules Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your telephone equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

Where it can be done safely, reorient the receiving television or radio antenna. To the extent possible, relocate the television, radio or other receiver with respect to the telephone equipment. (This increases the separation between the telephone equipment and the receiver.) Connect the telephone equipment into an outlet on a circuit difference from that to which the television, radio, or other receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE:

Clarity, A Division of Plantronics, Inc. 4289 Bonny Oaks Chattanooga, TN 37406, USA Phone: (800) 426-3738,

Fax: (800) 325-8871

# Industry Canada Technical Specifications

## This product meets the applicable Industry Canada technical specifications.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual

service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

<u>Caution:</u> Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

[The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.]

## SUPPLIER'S DECLARATION OF CONFORMITY

Issue Date: 09/12/2002

We:

Walker, a division of Plantronics 12082 Western Ave. Garden Grove, CA 92841-2913

#### Declare that the product:

Description: Speakerphone w/Remote Control Model: RC-100, RC-200

Bearing ACTA labeling identification number US:4B5MT08BRC (Replaces FCC registration 4B5HKG-23816-MT-E) to which this declaration relates is in conformity with the following standard/s:

Federal Communications Commission's 47 CFR Part 68

The Bases on which Conformity is being declared:

the Administrative Council on Terminal Attachments (ACTA) adopted criteria:

TIA/EIA/IS-968 July 2001

Additional product information can be found on the Digital Loggers website <a href="www.ameriphone.com">www.ameriphone.com</a>
A copy of this statement can be found at <a href="www.sdoc.ws">www.sdoc.ws</a>
Acknowledgment of this declaration can be found on the ACTA Website <a href="www.part68.org">www.part68.org</a>

Related Labeling Information:

AC REN: 0.8B

Jack Type: USOC type RJ11

This mark first applied:

Place of Issue: Fremont Labs

42307 Osgood Rd Suite E Fremont, CA USA 94539

Issued: 09/12/2002

THE WP Quality

Date: 9/5/02

# CHAPTER 10 WARRANTY

This warranty applies only to AMERIPHONE products that are purchased and used in the United States or Canada.

CLARITY, Inc. warrants the **RC100** and **RC200** against any defect in materials or workmanship for the period of one year from the date of purchase.

If your AMERIPHONE product is defective and returned within 30 days of the date of purchase, your authorized AMERIPHONE dealer will replace it at no charge.

If returned after 30 days but within one year from the date of purchase, we will repair or replace it at no charge. In the repair of your **RC**, we may use new or reconditioned replacement parts. If we elect to replace your **RC**, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the original warranty period, whichever is longer.

Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use), are limited to one year from date of purchase. We will not pay for loss of time, inconvenience, loss of use of your RC, or property damage caused by your RC or its failure to work, or any other incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

To get warranty service for your **RC**, you must provide proof of the purchase date. Within 30 days of the date of purchase, return your **RC** to the place where you purchased it for immediate replacement. After 30 days, call CLARITY at (800) 426-3738 for the authorized service center nearest you. You must prepay all shipping costs. We suggest you save the original packaging materials in the event you need to ship the **RC**. When in need of warranty repair, please call our Customer Service Department at (800) 426-3738 (VOICE) or at (800) 772-2889 (TTY). They will help you process your return shipment.

This warranty does not cover defects resulting from accidents, damage while in transit to our service location, alterations, unauthorized repair, failure to follow instructions, misuse, use outside the United States or Canada, fire, flood, and acts of God. Nor do we warrant the product to be compatible with any particular telephone equipment, party line, key telephone systems or more sophisticated switching systems. If your **RC** is not covered by this warranty, call us at (800) 426-3738 for advice as to whether we will repair your **RC** and other repair information. The repaired parts shallbe warranted for 90 days.

## CHAPTER II FEATURE SUMMARY

### **INDEX**

Feature	RC100	RC200
Memory	20	20
Auto dialing MI	•	•
Memory scanning	•	•
No. of memory scanned	6	20
Scanning speed	fixed	selectable
Remote dialing	•	•
Voice activated answering		•
Remote flash		•
Voice mail indicator		•
Unanswered call indicator		•
Headset operation/control		•
Connection for Air Switch or accessory switch	•	•
Back-up battery provided		•

### **CONTACT US**

Clarity, A Division of Plantronics, Inc.

4289 Bonny Oaks

Chattanooga, TN 37406, USA Phone: (800) 426-3738 or (423) 622-7793

TTY: (800) 772-2889 Fax: (800) 325-8871

Email: claritycs@plantronics.com

www.clarityproducts.com

AC adapter	4
Air switch	9
Accessories and Switches	9
Auto dialing	7
Batteries	4
Channel setting	13
Connections	4
Credit card calling	8
Dial mode	4
FCC information	14
Feature summary	20
Flash	5, 8
Headset, accessory	9
Headset button	
Installation	
Lapel microphone	
Maintenance	14
Memory dialing	
Memory, programming	6
Microphone	3, 6
Mounting	
On/Off button	3, 6-7
Pause	6
Pillow switch	
Power	3
Program	
Pulse dialing	4
Quick start guide	10
Redial	
Remote Transmitter	
Remote Flash switch	
Ringer volume	.3, 6, 10
Scan	
Scan rate	5
Telebanking	8
Tone dialing	4
Troubleshooting	12
Unanswered call indicator	4-5, 8
Volume	3, 6
Voice Activation	
Voice Mail Indicator	
Warranty	18

## RC100 + RC200

## Téléphone Amplificateur à Distance



## Manuel d'utilisation



Please read these Instructions carefully before use. Keep for future reference.

Clarity, a Division of Plantronics, Inc. 4289 Bonny Oaks • Chattanooga, TN 37406 • USA Phone: (800) 426-3738 • Fax: (800) 325-8871

### RENSEIGNEMENTS IMPORTANTS SUR LA SÉCURITÉ

Lorsque vous utiliserez votre téléphone, suivez to jours les mesures de sécurité de base suivantes afin de réduire les risques d'incendie, de choc électrique et de blessures.

- Lire et bien comprendre toutes les instructions.
   Se conformer à tous les avertissements et à toutes les instructions marqués sur l'appareil.
- Pendant un orage électrique, ne pas utiliser de téléphone autre qu'un téléphone sans cordon. Il pourrait y avoir un léger risque de choc électrique.
- 3. Ne pas utiliser le téléphone près d'une fuite de gaz. Si vous croyez qu'il y a une fuite de gaz, signalez celle-ci immédiatement en utilisant un téléphone qui ne se trouve pas à proximité de la fuite de gaz.
- 4. Ne pas utiliser le téléphone dans un endroit humide ou lorsque vous êtes mouillé. Par exemple, ne pas l'utiliser sous la douche, près d'une piscine, d'une baignoire, d'un lavabo de cuisine ou de salle de lavage, ni dans un soussol humide. Ne pas utiliser de nettoyeurs liquides ou en aérosol. Si un liquide quelconque est renversé sur l'appareil, débranchez la prise téléphonique et le cordon d'alimentation immédiatement. Ne pas le brancher de nouveau avant qu'il soit complètement sec.
- Ne pas placer cet appareil dans un endroit où les cordons risquent d'être piétinés. Protéger les cordons de tout dommage ou frottement.
- 6. Si l'appareil ne fonctionne pas normalement, lire la section "En cas de difficultés". Si vous ne trouvez pas la solution à votre problème ou si l'appareil est endommagé, reportez-vous à la garantie d'Ameriphone. Ne pas ouvrir l'appareil sauf pour suivre les instructions contenues dans ce manuel. L'ouverture et l'assemblage de l'appareil peuvent exposer l'utilisateur à des tensions dangereuses ou à d'autres risques. L'ouverture de l'appareil entraîne automatiquement l'annulation de la garantie.
- 7. Si le téléphone est alimenté par une pile de rechange en cas de pannes d'électricité, remplacer la pile conformément aux instructions contenues dans ce manuel seulement. Ne pas chauffer ni mutiler les piles : elles contiennent des substances caustiques.
- 8. Débrancher l'appareil de la prise murale et confier toute réparation à un technicien qualifié dans les conditions suivantes :
  - A. Lorsque le cordon d'alimentation ou la fiche sont endommagés ou effilochés.
  - B. Si un liquide a été renversé sur l'appareil.
  - **C.** Si l'appareil a été exposé à la pluie ou à l'humidité.
  - D. Si l'appareil ne fonctionne pas normalement quand les instructions d'utilisation sont respectées, ne faites que les rajustements qui sont expliqués dans ce manuel d'utilisation car vous pourriez l'endommager davantage.
  - E. Si l'appareil a été échappé ou s'il semble être endommagé.
  - F. Si le rendement de l'appareil est nettement réduit.

9. Cet appareil est muni d'une prise polarisée dont un des côtés est plus large que l'autre. Vous ne pourrez pas le brancher dans une prise de courant non polarisée. Ne tentez pas de modifier ceci. Si vous êtes incapable de le brancher dans votre prise de courant, faites changer celle-ci par un électricien.

#### RENSEIGNEMENTS SUPPLÉMÉNTAIRES À L'INTENTION DES UTILISATEURS CANADIENS

AVIS: L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère ne garantit pas toutefois que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer le présent matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunications. Le matériel doit également être installé selon une méthode de raccordement approuvée. L'abonné ne doit pas oublier que malgré le respect des conditions énoncées ci-dessus, il se peut qu'il y ait dégradation du service dans certaines situations. Le matériel homologué doit être réparé par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications se réserve le droit de demander à un utilisateur de débrancher un appareil s'il a effectué des réparations ou des modifications ou si l'appareil fonctionne mal.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

MISE EN GARDE: L'utilisateur ne doit pas tenter de faire les raccordements de mise à la terre lui-même; il doit avoir recours à un service d'inspection des installations électriques ou à un électricien, le plus tôt pos-

AVIS: Le facteur de charge attribué à chaque appareil permet de déterminer le nombre total de téléphones pouvant être raccordés à une même ligne. Pour éviter les surcharges, la somme des facteurs de charge des appareils raccordés à la ligne ne doit pas dépasser 100, quel que soit le modèle utilisé.

#### **CONSERVEZ CES INSTRUCTIONS**

## **TABLE DES MATIÈRES**

CHAPITRE 2 : LISTE DES PIÈCES	2
CHAPITRE 3 : COMMANDES ET CARACTÉRISTIQUES	3
CHAPITRE 4: INSTALLATION	4
<b>A.</b> Piles	4
B. Raccordement	4
C. Réglage de votre RC	4
CHAPITRE 5 : UTILISATION	6
A. Enregistrement des numéros dans la mémoire	6
<b>B.</b> Appeler de votre téléphone	
I. Appels à partir du clavier	
2. Appels à partir du clavier de mémorisation	
3. Composition automatique	
du premier numéro mémorisé dans MI	7
4. Appels à l'aide de la fonction scan	7
5. Appels à l'aide de l'émetteur à distance	
C. Répondre aux appels	<b>7</b>
I. Emploi du clavier	
2. Emploi de l'émetteur à distance	7
3. Réponse activée par la voix	
D. Autres utilisations	
I. Recomposition	
2. Commutateur	
3. Voyant de la boîte vocale	
4. Voyant des appels non répondus	
5. Appels au moyen de cartes de crédit et de télébanque	
CHAPITRE 6 : ACCESSOIRES OPTIONNELS	
A. Commande à distance	
B. Bouton coussiné	9
C. Microphone-cravate	9
D. Écouteurs	9
CHAPITRE 7 : FICHE D'INSTALLATION RAPIDE / SOMMAIRE	10
CHAPITRE 8 : EN CAS DE DIFFICULTÉS	12
CHAPITRE 9 : ENTRETIEN	
CHAPITRE 10 : GARANTIE	
CHAPITRE II : SOMMAIRE DES CARACTÉRISTIQUES	
CONTACTEZ-NOUS	
INDEX	

# CHAPITRE I

Merci d'avoir choisi le nouveau téléphone DIALOGUE **RC** à amplificateur à distance dE CLARITY Inc. Ce téléphone a été conçu pour répondre aux normes de qualité les plus élevées afin que vous puissiez l'utiliser sans problème pendant des années.

Veuillez lire attentivement les instructions suivantes avant d'utiliser le DIALOGUE **RC**. Pour vous permettre d'utiliser votre DIALOGUE **RC** le plus tôt possible, voir le chapitre 5 «Fiche d'installation rapide / Sommaire». Conservez ce manuel pour référence ultérieure.

Conservez votre reçu de caisse comme preuve d'achat pour tout service couvert par la garantie.

Si vous avez des questions au sujet de votre téléphone DIALOGUE **RC**, n'hésitez pas à communiquer avec notre service à la clientèle au:

Voix: (800) 426-3738 Téléscripteur: (800)772-2889 Fax: (800) 325-8871

### CHAPITRE 2 LISTE DES PIÈCES

Votre DIALOGUE **RC** contient les pièces suivantes :

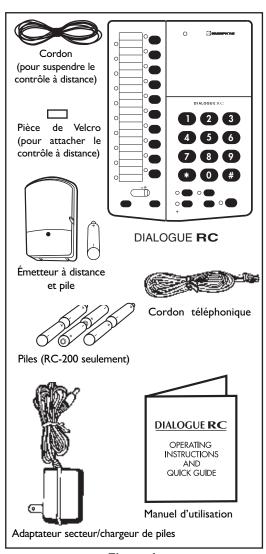


Figure I
Liste des pièces du DIALOGUE RC

# CHAPITRE 3 COMMANDES ET CARACTÉRISTIQUES

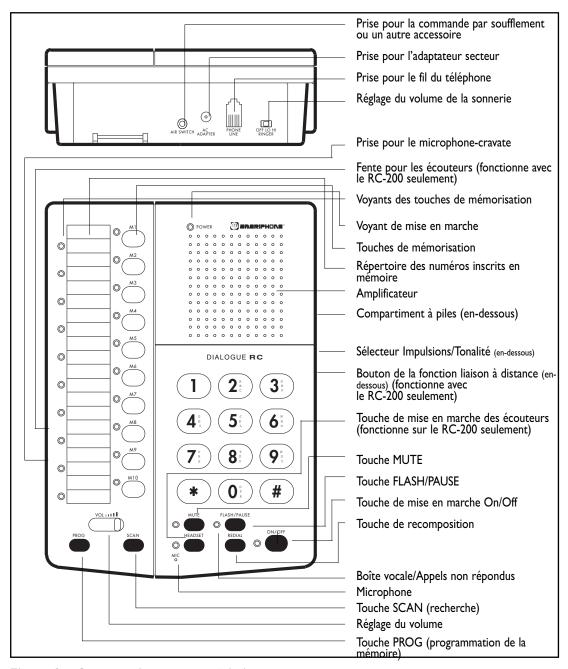


Figure 2 – Commandes et caractéristiques

# CHAPITRE 4 INSTALLATION

#### A. Piles (incluses avec le RC-200)

#### Téléphone à amplificateur

 L'appareil utilise six piles au Nickel Metal Hydride (Ni-MH) rechargeables de grosseur «AA» pour la sauvegarde au moment d'une panne de courant (Voir fig. 3). Elles permettent au DIALOGUE RC de fonctionner pendant environ 5 heures. NE PAS EMPLOYER DE PILES ALCALINES, elles endommageront votre appareil.

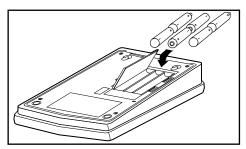


Figure 3 - Compartiment pour les piles

#### Émetteur à distance

2. Installez la pile alcaline 12V de grosseur «23A» (grosseur briquet) dans l'émetteur à distance (inclus) comme le démontre la figure 4. Dans des conditions normales d'utilisation, elle dureront entre 6 et 12 mois. Si le voyant de mise en marche est faible ou ne s'allume plus quand on appuie sur le bouton, remplacez la pile. L'émetteur à distance a un champ d'opération de 40 pieds.

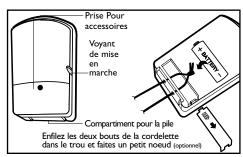


Figure 4 - L'émetteur à distance

#### **B.** Raccordements

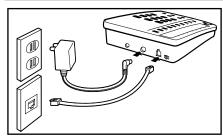


Figure 5 – Raccordement du cordon téléphonique et de l'adaptateur secteur

- Raccordez le cordon téléphonique et l'adapta teur secteur comme démontré dans la figure 5.
- Placez le sélecteur Impulsions/tonalité (T/P) à T si vous êtes abonné au service «touch tone», placez-le à P si vous avez le service à impulsions. (Voir figure 2)

Le DIALOGUE **RC** peut être placé sur un bureau ou installé au mur. Ne le placez pas sur une surface métallique, ou près d'un ordinateur, un téléviseur, une radio, un microonde ou un autre équipement électrique ou près de ceuxci, car cela pourrait causer de l'interférence au signal sans fils de l'émetteur à distance.

#### C. Réglage de votre RC

Le DIALOGUE **RC** est réglé en manufacture de la façon suivante :

- Temps de recherche de 5 secondes par mémoire.
- Réponse au ton de la voix (RC-200 seulement) est à la position OFF.
- Le voyant des appels non répondus est à la position ON.
- Le voyant de la boîte vocale (RC-200 seulement) est à la position OFF.
- 5. Le sélecteur Impulsions/tonalité est à la position Tone.
- **6.** Le volume de la sonnerie est à la position Hi (élevée).
- 7. «0» (opératrice) a été programmé dans le premier espace de mémorisation M1.
- **8.** La commande à distance de la fonction liaison (RC-200 seulement) est à la position **OFF**.

# CHAPITRE 4 (SUITE)

Vous pouvez installer le DIALOGUE **RC** de la facon suivante selon vos besoins.

#### Installation de la fonction SCAN

#### Pour le DIALOGUE RC-100 :

Seulement les six premiers numéros seront automatiquement scannés. Le scanneur s'arrête pendant 5 secondes à chaque espace de mémorisation pour vous laisser le temps de choisir.

Pour désactiver ou activer la fonction SCAN :

- I. Appuyez sur **PROGRAM**.
- Appuyez sur le 0 du clavier pour la désactiver, ou appuyez sur le 1 du clavier pour l'activer
- 3. Ensuite, appuyez sur le bouton **SCAN**.

#### Pour le DIALOGUE RC-200 :

Tous les espaces de mémorisation qui ont un numéro en mémoire sont automatiquement scannés. Le temps de recherche détermine la durée d'arrêt du DIALOGUE **RC**-200 sur chaque espace de mémorisation avant de

Pour désactiver ou activer la fonction **SCAN**:

 Appuyez sur PROGRAM.

passer au prochain.

Figure 6

0

 En utilisant le tableau suivant, choisissez le temps d'arrêt et appuyez sur le chiffre corre spondant sur votre clavier.

Touches choisies	Durée d'arrêt sur chaque espace en secondes
0	Scan Function Off
0	5
2	4.5
3	4
4	3.5
6	3
6	2.5
Ø	2
8	1.5
•	1

Figure 7

3. Appuyez sur le bouton **SCAN** 




Figure 8

## Pour mettre l'activation de la voix soit à ON ou à OFF (RC-200 seulement) :

- I. Appuyez sur **PROGRAM**.
- 2. Appuyez deux fois sur le bouton «MUTE» Le voyant «Mute» clignote une fois, et le RC-200 émets quatre «bips» pour confirmer que l'activation par voix a été mis en marche.
- Pour l'éteindre répetez les étapes 1 et 2. Cette commande est confirmée par quatre bips.

Pour désactiver ou activer la fonction du voyant des appels non répondus (RC-200 seulement) :

- I. Appuyez sur **PROGRAM**.
- Appuyez deux fois sur le bouton HEADSET. (Le RC-200 émet quatre «bips» pour confirmer la commande).
- 3. Pour activer, répétez l'étape I et 2, ét le voyant **HEADSET** clignote une fois.

Pour activer ou désactiver la fonction du voyant de la boîte vocale (RC-200 seulement).

- I. Appuyez sur **PROGRAM**.
- 2. Appuyez deux fois sur le bouton FLASH/PAUSE. (Le RC-200 émet quatre «bips» et le voyant du FLASH/PAUSE clignote une fois.
- Pour désactiver, répétez les étapes I et 2, et le voyant du FLASH/PAUSE ne clig notera plus.

Pour activer ou désactiver la mise en marche à distance (RC-200 seulement).

 Glissez le bouton de la fonction liaison à distance sur la position ON ou OFF.

### **CHAPITRE 5 FONCTIONNEMENT**

Pour une communication optimale, parlez le plus près possible dans le DIALOGUE **RC**, et pas plus loin que 15 pieds (5 mètres). Gardez le microphone exempt de toute obstruction. Ne parlez pas en même temps que l'interlocuteur. Réglez le contrôle du volume ainsi que le volume de la sonnerie selon vos besoins.

#### A.Enregistrement des numéros dans la mémoire

Pour vous permettre de composer un numéro plus rapidement en appuyant sur une seule touche, votre appareil DIALOGUE **RC** est muni de 20 touches de mémorisation (deux numéros par touches). Quand vous enregistrez, si vous appuyez sur le bouton FLASH/PAUSE entre les numéros, un temps d'arrêt de 2 secondes se rajoute à la composition du numéro. Pour enregistrer un numéro dans la

١. Appuyez sur PROGRAM.

mémoire:

2. Composez le numéro (jusqu'à 40 chiffres par numéro).




Figure 9


**73 (3) (3)** 

- 4. Si vous faites une erreur ou si vous voulez changer le numéro, reprendre à l'étape I.
- 5. Pour effacer un numéro, appuyez sur PROGRAM, appuyez ensuite sur FLASH/PAUSE et puis sur l'espace de mémorisation correspondant.

#### B. Pour faire des appels

#### Composez à partir de votre clavier

ı. Appuyez sur le bouton ON/OFF et attendez la tonalité.



2. Composez le numéro sur le clavier. (Si aucun numéro n'est composé dans les 7 secondes suivantes, le DIALOGUE RC com-




Figure 12

- posera automatiquement le premier numéro mémorisé dans MI.)
- 3. Lorsque vous avez terminé, appuyez sur la touche **ON/OFF** pour raccrocher.

### Composition des numéros mémorisés à partir de l'appareil

I. Pour le premier numéro enregistré dans chaque touche de mémorisation, appuyez une fois sur cette touche. Pour le deuxième numéro, appuyez sur la touche de mémorisation deux fois. Le voyant du répertoire

montre la touche choisie.



3. Lorsque vous avez fini, appuyez sur le bouton **ON/OFF** pour raccrocher.



Figure 14

Figure 13

## **CHAPITRE 5** (SUITE)


#### Composition automatique du premier numéro mémorisé dans MI.

- De votre Clavier
  - Appuyez sur le bouton ON/OFF ou appuyez simplement sur MI.
  - Le numéro est composé automatique ment dans les 7 secondes qui suivent.
- B. Avec l'utilisation de l'émetteur à distance, la fonction scan activée :
  - Appuyez sur l'émetteur à distance.
  - Le numéro est compose automatiquement après trois scans de toutes les mémoires.
- La fonction scan désactivée.
  - Appuyez sur l'émetteur à distance.
  - Le numéro est composé automatiquement.

### Composition avec l'utilisation du bouton SCAN.

NB: Avant de pouvoir scanner les mémoires, vous devez avoir programmé au préalable des numéros de téléphone dans celles-ci (page 8). Pour l'utilisation du scanneur de mémorisation, la fonction SCAN doit être activée. Voir le chapitre 4, section C. Les espaces de mémoire qui sont vides sont sautés. Le répertoire de mémorisation est scanné trois fois ou jusqu'à ce qu'un numéro soit choisi. Si aucun numéro n'est choisi, le premier numéro mémorisé dans **MI** est composé.

- ١. Appuyez sur le bouton **SCAN**
- 2. Les voyants des espaces de mémorisation s'allument au fur et à mesure que la recherche se fait. Si vous avez DIALOGUE RC-100: Le scan se fait sur les 6 premiers espaces de mémorisation seulement. Si vous avez DIALOGUE RC-200: Le scan



se fait sur les 20 espaces de mémorisation (Un

4. LE DIALOGUE RC compose automatiquement le numéro sélectionné.



5. Appuyez sur le bouton **ON/OFF** pour raccrocher.

Figure 16

#### Composition avec l'utilisation de l'émetteur à distance.

- Avec la fonction scan activée:
  - Appuyez sur l'émetteur à distance pour commencer à scan-



Figure 17

- 2. Lorsque l'espace de mémorisation désiré est allumé, appuyez sur l'émetteur à distance. Le DIALOGUE RC compose automatiquement le numéro sélectionné.
- Appuyez une fois sur l'émetteur à distance pour raccrocher.
- B. Avec la fonction scan désactivée :
  - Appuyez une fois sur l'émetteur à distance.
  - L'appareil compose le premier numéro mémorisé dans MI.

### C. Répondre aux appels

#### À l'aide du clavier

0

0

Figure 15

Lorsque le téléphone sonne, appuyez sur le bouton **ON/OFF** pour l'activer.





Figure 18

2. Lorsque vous avez terminé, appuyez sur le bouton ON/OFF pour raccrocher.

#### À l'aide de l'émetteur à distance



sonne, appuyez sur l'émet teur à distance pour l'activer.

Figure 19

2. Appuyez une fois sur l'émetteur pour raccrocher.

# CHAPITRE 5 (SUITE)

## En utilisant la fonction activation par la voix (DIALOGUE RC-200 seulement)

- La fonction "Activation par la voix est inactivée ("OFF") au sortir de l'usine.
   Pour activer cette fonction, voir page 5.
- Dites «Allô» ou sifflez fort entre les sonneries. Si on emploie des écouteurs, parlez dans le micro phone des écouteurs.
- 3. Pour raccrocher, utilisez la télécommande ou appuyez sur la touche ON/OFF.

**NB:** Lorsque le correspondant qui vous a appelé raccroche, il se peut que le bureau de liaison de la compagnie de téléphone rétablisse la tonalité sur votre ligne.

Lorsque vous avez de nouveau la tonalité, votre **RC**-200 raccrochera automatiquement. Avant de raccrocher, il émettra 2 courts signaux sonores.

#### **D. Autres utilisations**

## Refaire le dernier numéro composé

 Appuyez sur le bouton REDIAL sur le clavier.

OU




Figure 20

2. Appuyez et maintenez l'émetteur à distance enfoncé pendant 3 secon des, jusqu'à ce que le voyant du bouton ON/OFF s'allume



Figure 21

#### La touche liaison (Flash)

La touche liaison vous permet d'accéder aux fonctions et aux services spéciaux offerts par votre compagnie de téléphone, comme la mise en attente, la conférence à trois et autres. Pour plus de renseignements, communiquez avec votre compagnie de téléphone.

Si vous possédez le DIALOGUE **RC** 200, vous pouvez vous servir de la fonction liaison avecl'émetteur à distance. Mettez le bouton de la fonction liaison à distance à **ON** (Voir chapitre 4,section C). Lorsque vous êtes en ligne, pour activer liaison, appuyez deux fois sur le bouton de l'émetteur à distance, dans les 3 secondes qui suivent.

#### Voyant de la boîte vocale (VMI)

Si vous êtes abonné au service d'une boîte vocale de votre compagnie de téléphone, le voyant lumineux de **FLASH/PAUSE** clignote et le RC fait un «bip» (une fois toutes les 3,5 minutes) pour vous informer que

vous avez un message. Vous entendez aussi un signal de «bégaiement» spécial de votre compagnie de téléphone. Pour écouter vos messages, suivre les instructions de la compagnie de téléphone. Lorsque vous faites un appel, le voyant lumineux s'éteint.



Figure 22



Figure 23

## Voyant des appels non répondus

Si le DIALOGUE **RC** sonne trois fois ou plus et qu'on ne répond pas, le voyant **FLASH/ PAUSE** clignote pour indiquer que vous avez manqué un appel. Lorsque vous activez le DIALOGUE **RC**, le voyant lumineux s'éteint.

## Appels au moyen d'une carte de crédit ou de télébanque

Vous pouvez transmettre vos numéros de compte ou vos numéros d'identification personnels (NIP) du DIALOGUE RC en les programmant dans la mémoire.

- Enregistrez à l'avance un numéro de compte ou vos NIP dans un espace de mémorisation en suivant les mêmes étapes que pour programmer un numéro de téléphone.
- Quand le système téléphonique automatisé le demande, appuyez sur la touche de mémorisa tion où votre numéro de compte ou votre NIP est mémorisé.

# CHAPITRE 6 ACCESSOIRES OPTIONNELS

#### A. COMMANDE PAR SOUFFLEMENT™

Pour activer le RC, il suffit de souffler dans le capteur d'air. Idéal pour les personnes dont les mouvements des bras et des doigts sont extrêmement limités. Vous pouvez la brancher soit dans l'émetteur à distance soit dans le DIALOGUE RC. Vous pouvez aussi l'installer sur le bras d'un fauteuil pour activer le téléphone à distance sans avoir à utiliser le toucher Souffler une fois dans le capteur d'air est l'équivalent d'appuyer une fois sur l'émetteur à distance.



#### **B. BOUTON COUSSINÉ**

Vous pouvez activer le **RC** avec un mouvement de la tête ou d'un bras.



#### C. MICROPHONE-CRAVATE

Pour les personnes dont la voix est faible.



## D. ÉCOUTEURS (Employés avec le DIALOGUE RC-200 seulement.)

Pour une conversation privée ou pour les personnes dont la voix est faible, vous pouvez installer des écouteurs optionnels au DIA-LOGUE RC-200. Appuyez sur le bouton HEADSET pour activer les écouteurs et fermer, par la même occasion, l'amplificateur. Lorsque l'activation par la voix et les écouteurs sont utilisés en même temps, vous pouvez répondre aux appels en parlant dans le microphone des écouteurs entre les sonneries.



## CHAPITRE 7 FICHE D'INSTALLATION RAPIDE/SOMMAIRE

Pour une description détaillée, voir le chapitre 5

OPÉRATION	ÉTAPES
INSTALLATION DES MODES DÉJÀ PROGRAMMÉS	EN MANUFACTURE :  Temps de scan = 5 secondes par espace de mémorisation.
	<ul> <li>Le bouton Impulsions/Tonalité placé à Tone.</li> </ul>
POUR CHANGER LES MODES D'OPÉRATION	
Pour régler la fonction SCAN	
Si vous avez le DIALOGUE RC-100.	Appuyez sur PROGRAM
Pour désactiver ou activer la fonction scan :	,
Si vous avez le DIALOGUE RC-200	Appuyez sur PROGRAM
Pour désactiver ou activer la fonction scan :	
Pour mettre l'activation par la voix soit à ON ou à OFF (RC-200 seulement).:	Appuyez sur PROGRAM
Pour désactiver ou activer la fonction du voyant	Appuyez sur PROGRAM
des appels non répondus.	
Pour activer ou désactiver la fonction du voyant de la boîte vocale (RC-200 seulement).	Appuyez sur PROGRAM
PROGRAMMATION DES NUMÉROS DANS LA MÉ	MOIRE
	Appuyez sur PROGRAM.
FAIRE UN APPEL EN COMPOSANT SUR LE RC	
A. À partir du clavier	Appuyez sur le bouton ON/OFF.
B. Composition automatique	Appuyez sur le bouton ON/OFF.
du premier numéro mémorisé dans MI	
C. Composition par touche de mémorisation	Appuyez sur une touche de mémorisation
	une fois pour composer le premier numéro
	mémorisé ou deux fois pour le deuxième.
FAIRE UN APPEL EN UTILISANT L'ÉMETTEUR À D	DISTANCE
A. Avec la fonction scan activée	Appuyez une fois sur l'émetteur à distance.
B. Avec la fonction scan désactivée	Appuyez une fois sur l'émetteur à distance.
RÉPONDRE À UN APPEL	
A. À partir du clavier	Appuyez sur le bouton ON/OFF pour répondre.
B. Avec l'utilisant de l'émetteur à distance	Appuyez une fois sur l'émetteur à distance pour répondre.
C. En utilisation l'activation par la voix	Dites «Allô» ou sifflez entre les sonneries pour
(DIALOGUE RC-200 seulement)	activer le téléphone.

<ul> <li>La fonction réponse activée par la voix est à OFF (RC-200)</li> <li>Volume régle à «Hi.»</li> </ul>	<ul> <li>Le voyant des appels non répondus est à la position ON.</li> <li>Le «0» (opératrice) a été programmé dans le premier espace de mémorisation M1.</li> </ul>	<ul> <li>Le voyant de la boîte, vocale est sur Off.(RC-200).</li> <li>Le bouton de la fonction liaison est à la position OFF(RC-200)</li> </ul>	
Appuyez sur le 0 du clavier	Appuyez ensuite sur le bouton SCAN.		
pour désactiver, ou appuyez sur le	e l		
du clavier pour activer.			
Appuyez sur le 0 du clavier	Appuyez ensuite sur le bouton SCAN.		
pour désactiver, ou appuyez sur l			
	pour le guide de sélection du temps d'arrêt.		
Appuyez deux fois sur le bouton	MUTE.		
Appuyez deux fois sur le bouton	HEADSET.		
Appuyez deux fois sur le bouton	FLASH/PAUSE.		
Composez le numéro. (jusqu'à 40 chiffres).	Choisissez la touche de mémorisation. Appour le premier espace et deux fois pour		
② Composez le numéro.	Appuyez sur le bouton ON/OFF pour i	raccrocher.	
le numéro est composé en 7 secondes.			
2 Lorsque vous êtes sur l'espace voulu, appuyez une autre fois.	Appuyez sur l'émetteur à distance pour r	accrocher.	
Le premier numéro mémorisé sous MI est composé.	Appuyez sur l'émetteur à distance pour raccrocher.		
Appuyez sur le bouton ON/OFF	pour raccrocher.		
	Appuyez une fois sur l'émetteur à distance pour raccrocher.		
② L'appareil raccroche automatiquement après 1 minute de silence ou quand il détecte la tonalité.			

### CHAPITRE 8 EN CAS DE DIFFICULTÉS

Si votre téléphone DIALOGUE **RC** venait à mal fonctionner, consultez le guide de dépannage suivant. Au cas où le problème persisterait, communiquez avec Ameriphone ou votre détaillant autorisé pour obtenir de l'aide, avant d'envoyer le téléphone pour réparation.

PROBLÈMES	CAUSES ET SOLUTION	
Pas de tonalité.	-Vérifiez toutes les cordes téléphoniques.	
Pas de pouvoir.	-Vérifiez tous les raccordements.	
Ne compose pas les numéros.	<ul> <li>Vérifiez tous les cordons téléphoniques et tous les raccordements.</li> <li>Changez le sélecteur de tonalité à pulse et essayer de nouveau.</li> </ul>	
Ne compose pas les numéros mémorisés.	– Il n'y a pas de numéros programmés dans la mémoire.	
L'émetteur à distance ne fonctionne pas.	<ul> <li>Vérifiez ou remplacez les piles.</li> <li>Vérifiez le réglage de la fréquence.</li> <li>Assurez-vous qu'aucune pièce du</li> <li>DIALOGUE RC n'est sur une surface métallique ou équipement électrique.</li> </ul>	
Pas de sonnerie.	<ul> <li>Vérifiez si le bouton de la sonnerie n'est pas position- né sur OFF.</li> </ul>	
Ne scanne pas toute la mémoire. – Activez la fonction <b>SCAN</b> .		
Scanne trop vite ou trop lentement.	<ul> <li>Le réglage du temps d'arrêt de la fonction scan est trop vite ou trop lent. (DIALOGUE RC-200 seulement.)</li> </ul>	
La communication est entrecoupée.	<ul> <li>Évitez de parler en même temps que l'interlocuteur.</li> <li>Changez de tour.</li> </ul>	
<b>RÉGLER LA SENSIBILITÉ</b> VOUS DEVEZ COMMUNIQUER AVEC AMERIPHONE AVANT DE FAIRE LES RAJUSTEMENTS SUIVANTS		
Les personnes qui appellent ne peuvent vous entendre lorsque vous utilisez les écouteurs optionnels avec microphone intégré.	<ul> <li>Ajustez le HEADSET MIC GAIN situé sous l'appareil; dans le sens des aiguilles d'une montre pour augmenter la sensibilité et dans le sens contraire pour diminuer la sensi- bilité.</li> </ul>	

# CHAPITRE 8 (SUITE)

### **RÉGLAGE DE LA FRÉQUENCE**

Le DIALOGUE **RC** et l'émetteur à distance utilise certains signaux radio spéciaux pour communiquer entre eux. Pour que l'émetteur à distance puisse activer le DIALOGUE **RC**, ils doivent tous les deux être réglés à la même fréquence. Un «bouton à bascule» est utilisé pour choisir la fréquence.

Votre téléphone et votre émetteur ont déjà été réglés à l'usine selon une fréquence standard. Dans des conditions normales d'utilisation, il n'est pas nécessaire de procéder à des rajustements.

Si des parasites se produisent dans la réception de votre appareil et que celui-ci s'active de lui-même et sans raison évidente, il pourrait être nécessaire de vérifier le réglage de la fréquence (le bouton à bascule) du DIALOGUE **RC** et de l'émetteur à distance.

- Enlevez le fond du couvercle de l'émetteur à distance.
- Localisez les boutons à bascule dans l'émet teur à distance et sous le boîtier du DIALOGUE RC.
- Utilisez un stylo pour régler les boutons à bascule afin qu'ils correspondent exacte ment entre eux.
- **4.** Replacez le couvercle de l'émetteur et faites un test.

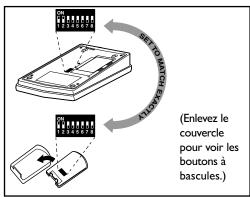


Figure 24 – Réglage de la fréquence

# CHAPITRE 9 ENTRETIEN

## RENSEIGNEMENTS IMPORTANTS À SAVOIR.

## GARDER CE DOCUMENT EN LIEU SÛR.

#### **INFORMATION SUR LA FCC:**

Cet appareil est conforme aux normes du paragraphe 68 des règles de la Federal Communications Commission (FCC) et aux exigences adoptées par l'ACTA.

Sous cet appareil, une étiquette indique un numéro d'identification de format US:4B5MT08BRC. En cas de demande par votre compagnie de téléphone, ce numéro doit leur être communiqué.

Les fiches et les prises utilisées pour brancher cet appareil aux réseaux électrique et de téléphone de la résidence doivent être conformes aux normes du paragraphe 68 des règles de la FCC et aux exigences adoptées par l'ACTA. Un cordon de téléphone et une fiche modulaire compatibles sont fournis avec cet appareil. La fiche est conçue pour être reliée à une prise modulaire compatible et conforme aux normes. Voir les détails dans le mode d'installation.

Le nombre REN est pratique pour déterminer le nombre d'appareils que vous pouvez raccorder sur la même ligne de téléphone. Si la totalité des nombres REN est excessive sur une ligne téléphonique, les appareils branchés peuvent ne pas sonner en cas d'appel de votre numéro. Dans la plupart des régions, mais pas toutes, le total des nombres REN de tous les appareils branchés sur la ligne ne doit pas dépasser cinq (5,0). Pour connaître le nombre maximal d'appareils que vous pouvez relier à la ligne, selon le code REN, appelez votre compagnie de téléphone locale. Pour les appareils homologués après le 23 juillet 2001, le nombre REN de cet appareil est inclus dans le numérod'identification de format

US:4B5MT08BRC. Les chiffres 08 correspondent au nombre REN sans la virgule décimale (p. ex. 08 correspond à un REN de 0,8). Pour les appareils plus anciens, le nombre REN est indiqué ailleurs sur l'étiquette.

Si votre appareil perturbe le réseau téléphonique, la compagnie de téléphone vous avise qu'une interruption temporaire de service peut être nécessaire. Lorsqu'un préavis n'est pas pratique, la compagnie avise le client dès que possible, en indiquant aussi au client son droit de porter plainte auprès de la FCC, s'il croit que cela est nécessaire. La compagnie de téléphone peut modifier ses installations, son matériel, ses opérations et ses procédures d'une façon qui pourrait influer sur le bon fonctionnement de votre appareil. Dans ce cas, vous recevrez un préavis qui vous donne la possibilité d'effectuer les modifications voulues pour éviter l'interruption de service.

Si vous éprouvez des difficultés avec cet appareil et désirez contacter le service de réparations ou de garantie, contactez le service après-vente à l'adresse et au numéro indiqués dans la section sur la GARANTIE. Si l'appareil nuit au réseau téléphonique, la compagnie de téléphone peut vous demander de débrancher l'appareil jusqu'à ce que le problème soit résolu.

#### NE DÉMONTEZ PAS CET APPAREIL.

Il ne contient aucune pièce réparable par l'utilisateur.

Si votre domicile est équipé d'un système d'alarme spécial relié à la ligne téléphonique, assurez-vous que l'installation de votre appareil ne désactive pas le système d'alarme; consultez la compagnie de téléphone ou un installateur qualifié.

Cet appareil est compatible avec le port d'une prothèse auditive (N'EST VALABLE QUE SI L'APPAREIL A UN ÉCOUTEUR TÉLÉPHONIQUE).

Nous recommandons l'installation d'un éliminateur de surtension de courant alternatif (c.a.) dans la prise de courant à laquelle cet appareil est branché. Selon les compagnies de téléphone, les surtensions électriques, particulièrement les courants transitoires dus à la foudre, peuvent détruire les appareils du consommateur reliés à des prises de c.a.



4289 Bonny Oaks, Chattanooga, TN 37406, É.-U.

(800) 874-3005 Voix

(800) 772-2889 Téléscripteur

(800) 325-8871 Fax

email: claritycs@plantronics.com
website: www.clarityproducts.com
Les appareils Ameriphone sont fabriqués par
Clarity, une division de Plantronics, Inc.
© Plantronics, Inc., 2004. Tous droits réservés.
Ameriphone, Amplifying Your Life et Walker
sont des marques de commerce ou des marques déposées de Plantronics, Inc.

# CHAPITRE 10 GARANTIE

Cette garantie s'applique seulement aux appareils Ameriphone achetés et utilisés aux États-Unis et au Canada.

Clarity Inc. garantit le DIALOGUE **RC-100** et le DIALOGUE **RC-200** contre tous défauts dans les matières premières et la fabrication pendant l'année suivant la date d'achat.

Si votre appareil AMERIPHONE est défectueux et que vous le retournez dans les 30 jours suivant la date d'achat, votre détaillant Ameriphone autorisé le remplacera sans frais.

Si vous le retournez après 30 jours mais au cours de l'année suivant la date d'achat, il sera réparé ou remplacé sans frais. Des pièces neuves ou des pièces remises à neuf peuvent être utilisées pour la réparation. Si nous choisissons de remplacer votre DIALOGUE **RC**, il se peut que ce soit par un appareil neuf ou remis à neuf du même modèle ou d'un modèle semblable. La réparation ou le remplacement sera garanti pour une période de 90 jours ou pour la période non écoulée de la garantie originale, si celle-ci dépasse 90 jours.

Les garanties implicites, y compris celles touchant des appareils conçus pour un usage particulier et la valeur marchande (une garantie non écrite selon laquelle l'appareil convient à un usage normal), se limitent à une période d'un an suivant la date d'achat. Nous ne débourserons aucun frais entraîné par les pertes de temps, les inconvénients, l'impossibilité d'utiliser votre DIA-LOGUE RC, ni pour dommages causés à la propriété par votre DIALOGUE RC ou par son mauvais fonctionnement ou pour tous autres dommages-intérêts indirects. Étant donné que dans certains États, il n'y a pas de restriction sur la période couverte par la garantie implicite ni d'exclusion concernant les dommages-intérêts indirects; par conséquent, ces restrictions ou exclusions peuvent ne pas s'appliquer.

Pour toutes réparations ou services couverts par la garantie, joindre une preuve de la date d'achat. Dans les 30 premiers jours suivant la date d'achat, retournez votre DIALOGUE RC au détaillant auprès de qui vous l'avez acheté, qui vous le remplacera immédiatement. Après 30 jours, téléphonez à CLARITY au numéro suivant: (800) 426-3738 pour connaître l'adresse du centre de service le plus près de chez vous. Vous devez payer à l'avance les frais de transport. Nous vous suggérons de conl'emballage original au cas où vous server auriez à le retourner. Si votre appareil est toujours garanti et a besoin d'être réparé, merci d'appeler notre service à la clientèle au (800) 426-3738 (Voix) ou (800) 772-2889 (TTY) **AVANT** de nous retourner votre appareil. Une conseillère vous précisera la procédure à suivre pour retourner votre téléphone.

Cette garantie ne couvre pas les dommages attribuables aux accidents, les dommages causés en transit, ceux provenant de modifications ou d'une réparation par un détaillant non autorisé, d'un défaut de suivre les instructions, d'un usage impropre, d'un usage hors des États-Unis ou du Canada, d'un incendie, d'une inondation ou d'une catastrophe quelconque. Nous ne garantissons pas que ce produit est patible avec toute pièce de téléphone, avec des lignes communes, avec n'importe quel téléphone à touches ou avec des systèmes téléphoniques plus perfectionnés. Si votre DIALOGUE RC n'est pas couvert par cette garantie, téléphonez-nous au numéro suivant: (800) 426-3738 pour obtenir des conseils concernant la réparation de votre appareil. Toute réparation sera couverte par une garantie de 90 jours.

### CHAPITRE II SOMMAIRE DES CARACTÉRISTIQUES

### Caractéristique RC-100 RC-200 Mémoire 20 20 Composition automatique MI Scan de la mémoire Nombre de touches de mémoire scannées 20 6 peut être choisie Vitesse du scanneur Composition à distance Réponse activée par la voix Liaison à distance Voyant de la boîte vocale Voyant pour appels non répondus Utilisation et contrôle du combiné Fentes pour la commande par soufflement ou autres accesoires Pile de sauvegarde incluse

### **CONTACTEZ-NOUS**

Clarity, a Division of Plantronics 4289 Bonny Oaks Drive Chattanooga, TN 37406

Voix: 800-426-3738 or 423-629-3460

Téléscripteur: 800-772-2889

Fax: 800-325-8871

Email: claritycs@plantronics.com

Visit our website: www.clarityproducts.com

#### INDEX

Activation de la voix	
Adaptateur AC	
Amplificateur	
Appels à l'aide d'une carte de crédit	
Bouton coussiné	
Bouton de la liaison à distance	3-4, 8
Bouton de mise en marche	3, 6-7
Boutons, accessoires	
Composition à l'aide de la mémoire	6
Composition automatique	
Composition par impulsions	
Composition par tonalité	4
Écouteurs, accessoires	
Écouteurs, bouton	
Émetteur à distance	4, 7-8
Entretien	
Garantie	14
Guide rapide	
Installation	4
Liaison	5, 8
Microphone	
Microphone-Cravate	
Mise en marche	
Mode composition	4
Montage	
Pause	
Piles	4
Problèmes	12
Programmation	
Programmation de la mémoire	
Raccordement	4
Recomposition	8
Réglage de la fréquence	13
Scanneur	5,
Sommaire des caractéristiques	1
Télébanque	8
Temps d'arrêt du scanneur	
Volume	3, 6
Voyant de la boîte vocale	
Volume de la sonnerie	
Voyant des appels non répondus	